

Part name (√ in the box)	RONIN-SC	RONIN-SC PRO Combo	Optional	Remarks
Ronin-SC Gimbal (main part)	√	√		
Ronin-SC Quick-Release Plate	√	√	√	Not compatible with Ronin-S
Ronin-SC Part 14 BG18 Grip	√	√	√	Not compatible with Ronin-S
Ronin-SC Part 1 Multi-Camera Control Cable (Multi-USB)	√	√	√	For Sony Not compatible with Ronin-S
Ronin-SC Part 2 Multi-Camera Control Cable (Type-C)	√	√	√	For Panasonic - Not compatible with Ronin-S
Ronin-SC Part 2 Multi-Camera Control Cable (Type-C to Micro USB)	√	√	√	For Fuji - Not compatible with Ronin-S
Ronin-SC Part 5 Camera Riser	√	√	√	compatible with Ronin-S
Ronin-S/SC Part 8 Phone Holder	√	√	√	compatible with Ronin-S
Ronin-S/SC Extended Grip Tripod (plastic)	√	√		compatible with Ronin-S
Ronin-S/SC USB-C charging cable	√	√		compatible with Ronin-S
Ronin-SC Lens Support	√	√		compatible with Ronin-S
Ronin-S/SC Allen Wrench/Screws	√	√		compatible with Ronin-S
Ronin-SC Storage Case	√	√		Not compatible with Ronin-S
Ronin-S Part 3 Focus Wheels		√		compatible with Ronin-S
Ronin-SC Part 6 Focus Motor		√	√	
Ronin-SC Part 7 Focus Motor Rod Mount		√	√	Not compatible with Ronin-S
Ronin-SC Part 10 RSS Splitter		√	√	Not compatible with Ronin-S
Ronin-S Part 19 Focus Gear Strip		√	√	compatible with Ronin-SC
Ronin-SC Part 9 RSS Control Cable for Panasonic			√	For Panasonic GH5/GH5S/GH3/4
Ronin-S Part 2 Extended Grip Tripod (metal)			√	compatible with Ronin-SC
Ronin-S Part 10 Cheese Plate			√	compatible with Ronin-SC
Ronin-S Part 16 Extended Lens Support			√	compatible with Ronin-SC
Ronin-S Part 7 Camera Riser			√	compatible with Ronin-SC
Ronin-S/SC L-type Camera Mounting Plate			√	compatible with Ronin-S